





T715

Pro1 Technologies

1111 S. Glenstone Ave., Suite 3 -100 Springfield, MO 65804

Toll Free: 888-776-1427 Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Table of Contents Thermostat Operation Thermostat Quick Reference Programming the Thermostat	1 2-3 4-7 8-10
Warranty Information	11




Caution:

Equipment damage hazard. Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

Una version en español de este manual se puede descargar en la pagina web de la compañia.

Thermostat Operation

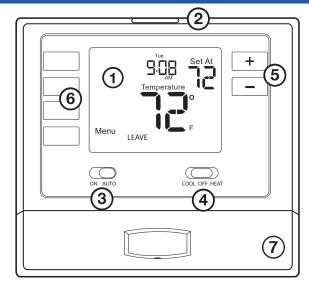

- 1 LCD Display
- (2) Glow in the dark light button
- 3 Fan Switch

- 4 System Switch
- **(5)** Temperature Setpoint Buttons
- **6** User Buttons
- (7) Easy change battery door

1 LCD Display

See page 4 for details about this display read out.

2 Glow in the dark light button

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

(3) Fan Switch

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.

4) System Switch

Selects the operation mode on your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.

5 Temperature Setpoint Buttons
Press the + or - buttons to

Press the + or - buttons to select the desired room temperature.


6 User Buttons

Use these buttons to set up your programming options. Refer to the next page for detail.

(7) Easy Change Battery Door See page 5 for details.



When the battery icon AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable. Freezing or over heating can occur.

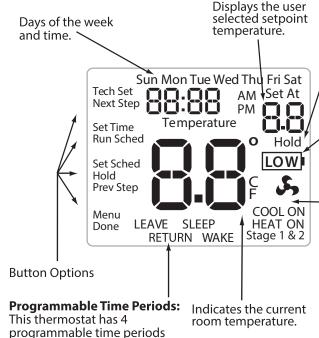

Hold: Is displayed when thermostat program is permanently overridden.

Low Battery Indicator: Replace batteries when indicator is shown.

System
Operation
Indicators:
The COOL ON,
HEAT ON or \$
icon will display
when the COOL,
HEAT, or \$
is on.


NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.



Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the set points will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 63 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

Battery Door Information

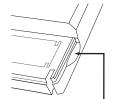

Replace with 2 AA Alkaline Batteries. High quality Alkaline batteries are recommended.

Use the finger bevel on the lower portion of the thermostat to open the easy access battery door.

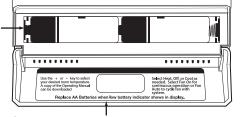

Simple operating instructions are found on the back of the battery door.

per day.

Temporary and Permanent Hold Feature

When cool or heat is turned on, the thermostat will display **HOLD** and **RUN SCHED** on the left of your screen when you press the + or - button.

Temporary Hold: At this time if you do nothing, the temperature will remain at this setpoint until next scheduled time period.


Permanent Hold: If you press the **HOLD** key on the left of your screen, you will see **HOLD** appear below the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the + or - keys.

To Return to Running Schedule: Press the **RUN SCHED** button on the left of your screen to exit either temporary or permanent hold.

Filter Change Reminder

If your HVAC contractor has configured the thermostat to remind you when the air filter needs to be changed, you will see **FILT** in the display when your air filter needs to be changed.

Resetting the filter change reminder: When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the second button from the top left side of the thermostat for 3 seconds.

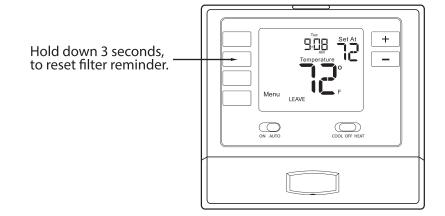

Set Time

1. With system switch set to OFF, press the **MENU** button

2. Press SET TIME

3. Day of the week will be flashing. Use the + or + key to select the current day of the week.

4. Press NEXT STEP

5. The current hour is flashing. Use the ____ or ___ key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.

6. Press **NEXT STEP**

7. Minutes are now flashing. Use the ____ or ___ key to select current minutes.

8. Press **DONE** when completed.

Set Program Schedule 5+1+1 or 7 Day

To customize your program schedule, follow these steps:

1. Select **HEAT** or **COOL** with the system switch. **Note:** You have to program heat and cool each seperately.

2. Press the MENU button (If menu does not appear first press RUN SCHED)

3. Press **SET SCHED**. Note: Monday-Friday or (**Monday if in 7 Day**) is displayed and the **WAKE** icon is shown. You are now programming the wake time period for that day.

4. Time is flashing. Use the ____ or ___ key to make your time selection for that day's **WAKE** time period.

5. Press **NEXT STEP**

6. The setpoint temperature is flashing. Use the hor key to make your setpoint selection for that day's **WAKE** time period.

7. Press **NEXT STEP**

8. Repeat steps 4 thru 7 for that day's **LEAVE** time period, **RETURN** time period, and **SLEEP** time period.

Programming The Thermostat

Warranty Information

Set Program Schedule 5+1+1 or 7 Day (Continue...)

Saturday:

Repeat steps 4 through 7 for the Saturday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for the Saturday **SLEEP** time period.

Sunday:

Repeat steps 4 through 7 for the Sunday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for the Sunday **SLEEP** time period.



If using 7-Day Programming use previous steps for every individual day.

You can also use these time saving functions. You must be in **Set Sched** Programming Mode (**Press Menu** >> **Press Set Sched**) for the following functions to work:

- 1) To copy ALL time periods and temperatures of current system and day to ALL days, Press and Hold 2nd button down on left until the Days and Time flash.
- 2) To copy ALL time periods (only times) for ALL days to the opposite system (Heat to Cool / Cool to Heat), Press and hold the Glow in the Dark Light button down until Set Time and Time flash.

Warranty Registration

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. You can register your new thermostat in 2 ways:

Online

Go to the company website, select warranty registration and fill out a short registration form.

Complete the form below and mail it to the address shown.

Warranty Registration

Name:	Thermostat Model:
Address:	Date Installed:
City: State: Zip:	Complete form and mail to: Thermostat Warranty Registration 1111 S. Glenstone Suite 3 -100 Springfield, MO 65804

Thormostat Model

Cut Out For Warranty Registration

