

Heater Installation Manual March 2020

Heater parts All parts will be assembled like the first picture shows


No.	Name	and the second s	3.1
1	St3. 9*10 Self-tapping screw		
2	Connecting Pipe		3.2
3	Heater Assembly		
3.1	Breaker Mounting Plate		
3.2	Electric Strip	Ne lu	

Step 1: Install 3.2 - Electric Strip

3.

1.

Remove four screws

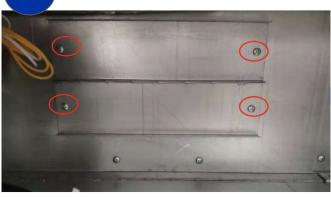



Remove the cover plate from air handlers










Step 2: Install breaker




Adjust the wire position, be careful avoid the plate press the wire

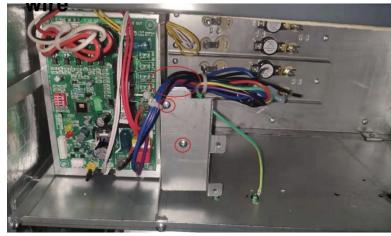


Fix the connecting screws

2.

Fix breaker mounting plate with three screws

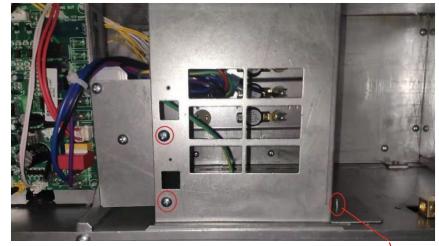

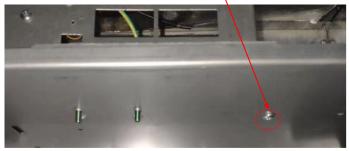

This screw was fixed from the volute side

Step 3: Break out appropriate area of the plastic circuit breaker cover on the access panel of the air handler

